


Fuses

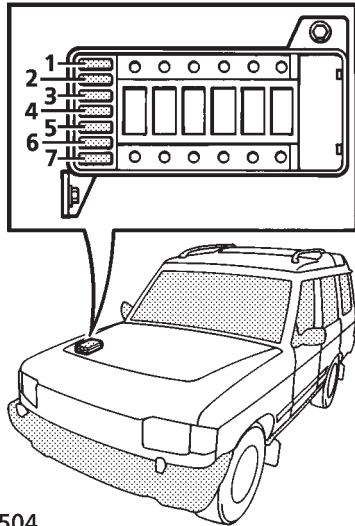

J504

ENGINE COMPARTMENT FUSE BOX

WARNING

Batteries emit explosive hydrogen gas; ensure that sparks, flames and other ignition sources (i.e. cigarettes) are kept away from the engine compartment.

A second fuse box is located on the right side of the engine compartment adjacent to the engine coolant reservoir.

The circuits protected and their locations are shown on a printed diagram on the inside of the fuse box cover and are also listed below.

WARNING

Fit only replacement fuses of the same rating and type. Always rectify the cause of a failure, before replacing a fuse. Seek qualified assistance if necessary.

Fuse No.	Rating (amps)	Electrical circuit
1	30	Heated rear window
2	20	Lights
3	30	Air conditioning
4	30	Hazard warning lights, horn
5	30	Anti-lock braking
6	5	Fuel pump
7	20	Fuel system

NOTE: Six main circuit fuses are also located in the engine compartment fuse box. If a fault is suspected in one of the main circuit fuses, contact your dealer for assistance.