

## WARNING AND INFORMATION MESSAGES



**Do not ignore warning messages. Take appropriate action and, when necessary, seek qualified assistance before driving the vehicle.**

If more than one message is active, each is displayed in turn for 2 seconds in order of priority.

**Note:** The message centre messages and their meanings, are detailed where necessary within the appropriate subject sections.

## TRIP COMPUTER


The computer memory stores data for a journey or series of journeys until it is reset to zero.

The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.

Three independent memories are available, A, B and Auto. A and B memories can be reset independently, while the Auto trip will reset after every ignition cycle as the vehicle moves.

Trip computer information is displayed on the instrument panel.

## USING THE TRIP COMPUTER

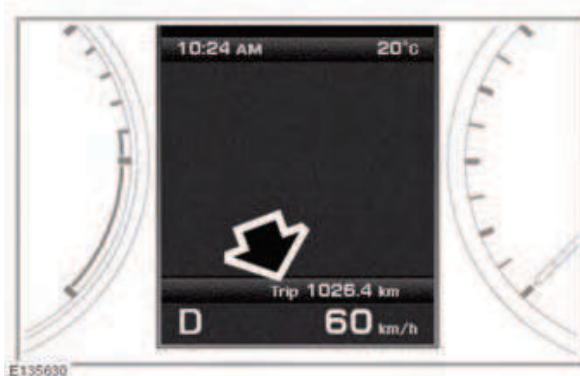

A short press (1 second or less) or a series of short presses of the **i** button will change the trip computer display.

The options available are:

- Odometer.
- Trip distance.
- Trip average speed.
- Trip average fuel consumption.
- Instantaneous (short term average) fuel consumption.
- Range available from remaining fuel.
- Blank display.

To reset the trip computer values to zero, press and hold the **i** button for 2 seconds.

To reset the fuel consumption figure, press and hold the **i** button until the display clears.

There are 3 trip memories available, A, B and Auto. You can specify which trip memory is viewable using the **i** button.